

Ready-to-install sauna backrests – a quick and easy solution

Treat all the wooden parts of the sauna backrest with a wood preservative to protect the wood from moisture. It's more convenient to treat the backrest prior to installation.

The manufacturer cannot be held responsible for any damage caused by backrests not being correctly installed or treated.

TOOLS FOR INSTALLATION


1.




Tape measure *

4.

Screws 4 x 40 mm – 3-6 pcs (according to the dimensions of the backrest). Included in the product packaging.

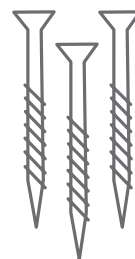

2.

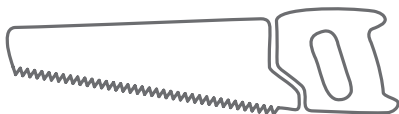

Saw *

5.

Wooden caps 3-6 pcs (according to the number of screws). Included in the product packaging.




3.



Cordless drill *

6.

Wood preservative + paintbrush *

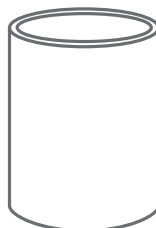

+



* Not included in the package





INSTALLATION PROCESS

1. Adjust the length of the grate

If necessary, use a saw to cut the backrest grate to the correct length for the sauna bench. Make sure that after the backrest has been cut, the panels will still be connected together with a batten.

After cutting, the length of unconnected panels at either end of the backrest grate should be no more than 1 ft.

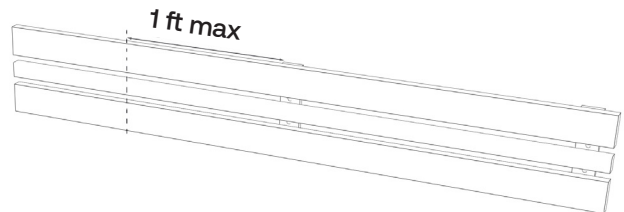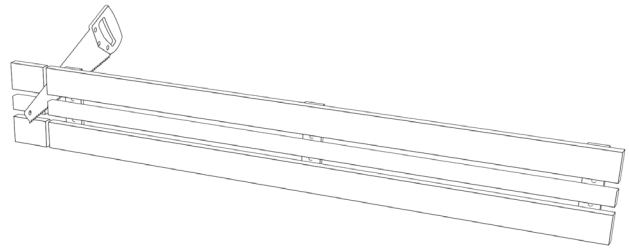

2. Install the backrest

Use the 4 x 40 mm screws provided to fasten the backrest grate to the wall, then cover the screw holes with wooden caps.

