

Ready-to-install sauna benchskirts – a quick and easy solution

Treat all the wooden parts of the sauna benchskirt with a wood preservative to protect the wood from moisture. It's more convenient to treat the bench skirts prior to installation.

The manufacturer cannot be held responsible for any damage caused by benchskirts not being correctly installed or treated.

TOOLS FOR INSTALLATION


1.




Tape measure *

4.

Screws 4 x 40 mm – 6-8 pcs (according to the dimensions of the backrest). Included in the product packaging.

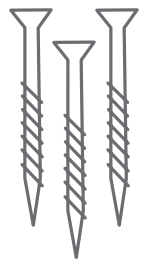

2.

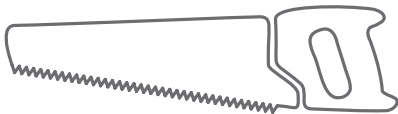

Saw *

5.

Wooden caps 6-8 pcs (according to the number of screws). Included in the product packaging.




3.



Cordless drill *

6.

Wood preservative + paintbrush *

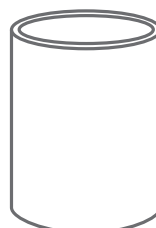

+




* Not included in the package



INSTALLATION PROCESS

1. Measure the sauna bench



Measure the bench onto which you intend to mount the bench skirt. The benchskirt should not be longer than the bench.

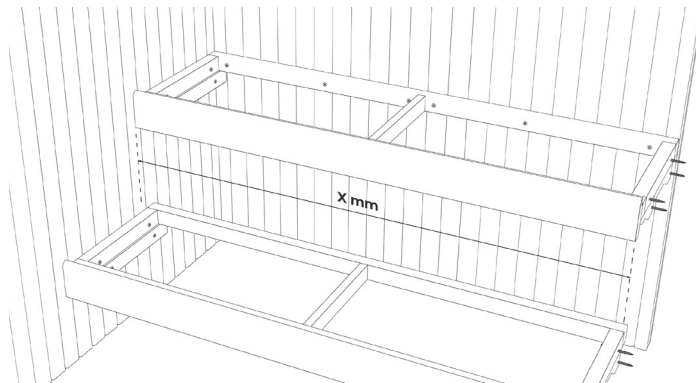

2. Adjust the length of the benchskirt

If necessary, use a saw to cut the benchskirt to the correct length. Make sure that after the bench skirt has been cut, the panels will still be connected together with a batten.

After cutting, the length of unconnected panels at either end of the bench skirt should be no more than 1 ft..

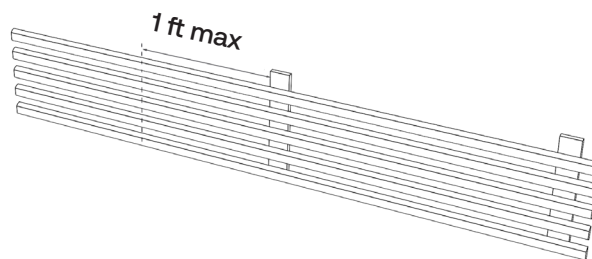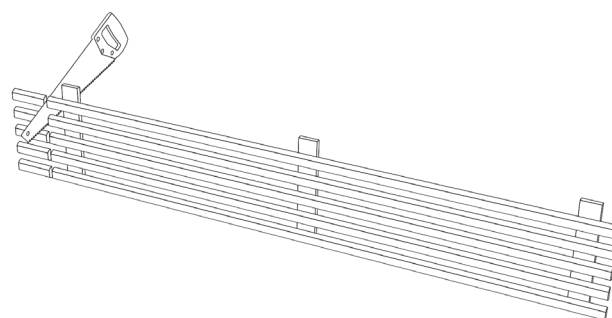

3. Install the benchskirt

Use screws to fasten the bench skirt to the frontboard of the bench from behind. Select screws that are the right length to fix the bench skirt securely to the frontboard without penetrating through the front edge of the bench.

